

GB

CAUTION

This appliance is for outdoor use only! Provide ample ventilation. This gas appliance consumes air (oxygen). Do not use this appliance in an unventilated space to avoid endangering your life. If still more gas appliances and/or occupants using gas are added to the space, additional ventilation must be provided.

IMPORTANT

Read these instructions carefully so as to familiarise yourself with the appliance before connecting it to a gas cylinder. Retain these instructions for future reference.

1. Introduction

- This appliance complies with SANS 1539:2012
- This appliance shall be used exclusively on CADAC domestic gas cylinders.
- It may be hazardous to attempt to fit the appliance to other types of gas cylinders.
- Appliance category: Cylinder Vapour Pressure propane / butane mixture (LPG).
- Nominal consumption: 203 g/hr
- Nominal Heat Input: 2.8kW
- This appliance uses a unique No.23 CADAC jet. (See Section 9).
- Gas appliances require ventilation for efficient performance and to ensure the safety of users and other persons in close proximity.
- Use Outdoors Only

2. Safety information

- Check that the seal (K) between the Stem (E) and the gas cylinder is in place and in good condition before connecting to the gas cylinder (See Fig. 2.)
- Do not use the appliance if it has a damaged or worn seal.
- Do not use an appliance that is leaking, damaged or which does not operate properly. Use this appliance only on a firm level surface.
- Ensure the appliance is used away from flammable materials. Minimum safe distances are: Above the appliance 1.2m. At the rear and sides 0,6m (See Fig. 1)
- Ensure that the appliance is fitted to the gas cylinder in a well-ventilated location, preferably outdoors, away from any sources of ignition, such as naked flames, pilots, electric fires and away from other people.
- If there is a leak on your appliance (smell of gas), take it outside immediately into a well-ventilated flame free location where the leak may be detected and stopped. If you wish to check for leaks on your appliance, do it outside. Do not try to detect leaks using a flame, use soapy water.
- In the event of light back (where the flame burns back and ignites at the jet (G) immediately turn off the gas supply by closing the cylinder valve using the control knob (See fig. 2). After the flame is extinguished, re-light the appliance as described in Section 4 below. Should the flame light back again, return the appliance to your authorised CADAC repair agent.

3. Assembly Instructions

- The CADAC Grillogas Braai is easy to assemble and prepare for use.
- To fit the stem (E) to the gas cylinder, first check that the cylinder valve is in the "off" position by turning the control knob clockwise
- to its "stop" (See Fig. 2). Screw the stem into the cylinder in a clockwise direction until it is fully engaged.
- Tighten by hand only.

Grill Plate (740-10-ZA)

- Place the burner base plate (L) plate on the stem (E), making sure that the burner tube fully engages on the stem (E).
- Place the burner pan (B) onto the burner base plate and stem.
- Place the Grill Plate (A)in the burner pan, making sure that it sits properly on the locators (J).

BBQ Grid (740-20-ZA)


- Place the burner base plate (L) plate on the stem (E), making sure that the burner tube fully engages on the stem (E).
- Place the burner pan (B) onto the burner base plate and stem.
- Place the BBQ Grid (F) in the burner pan, making sure that it sits properly on the locators (J).
- WARNING !: Your BBQ Grid has a non-stick PTFE coating. Avoid using abrasive cooking utensils and cleaners, as this may damage its surface.

Paella Pan Mini


- Place the burner base plate (L) plate on the stem (E), making sure that the burner tube fully engages on the stem (E).
- Place the burner pan (B) onto the burner base plate and stem.
- Place the pot/ paella stand (D) on the burner pan, ensuring that the three hooks sit correctly over the outer rim of the Burner Pan (B)
- Place the paella pan mini, onto the pot / paella stand (D).
- WARNING!: When pre-heating, do not use the paella pan mini on a high-flame setting for more than 15 minutes, as this can damage the non-stick coating and the pan


Pots

- Place the burner base plate (L) plate on the stem (E), making sure that the burner tube fully engages on the stem (E).
- Place the burner pan (B) onto the burner base plate and stem.
- Place the pot/ paella stand (D) on the burner pan, ensuring that the three hooks sit correctly over the outer rim of the Burner Pan (B) Place a pot, onto the pot / paella stand (D). Please note, the pot size must not exceed 340mm in diameter.

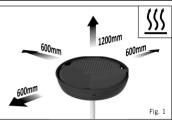



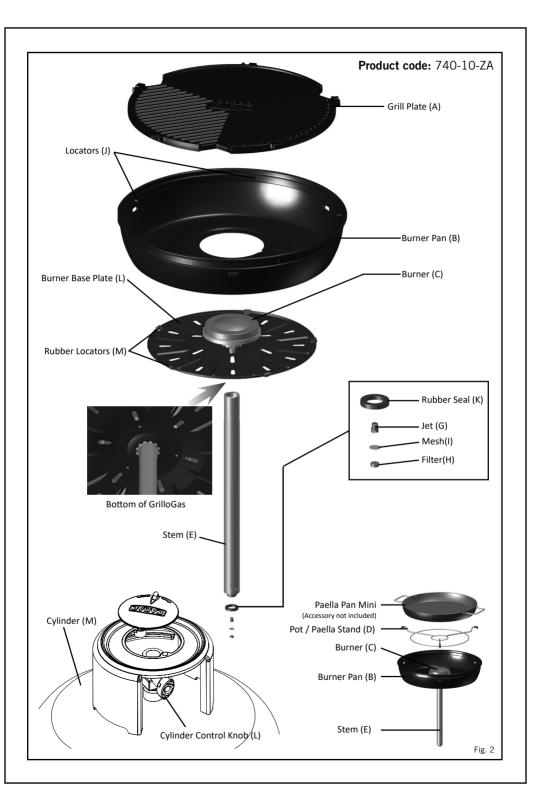

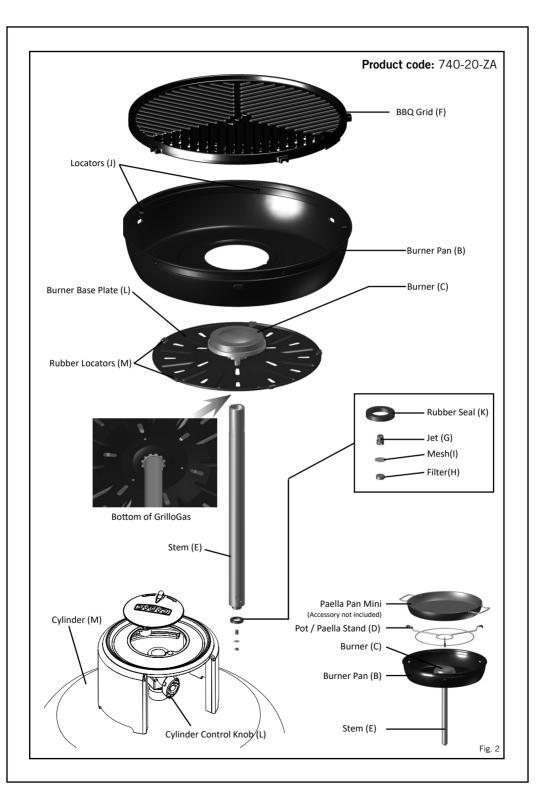

4. Operating the Appliance

- CAUTION: Accessible parts may become very hot. Keep young children away from the appliance.
- WARNING!: When pre-heating, do not use the paella pan on a high-flame setting for more than 15 minutes, as this can damage the non-stick coating and the pan
- Do not move the unit whilst in use. The use of protective gloves is recommended.
- To light the appliance, light a match or barbecue lighter, turn on the cylinder valve by turning the control knob in an anticlockwise direction to the open position and light the appliance burner (C).
- Use the control knob to adjust the flame intensity to the desired level by turning the knob clockwise to decrease the flame and anticlockwise to increase the flame (See Fig.2).
- Cooking temperatures are easily adjusted to suit your own requirements by turning the Cylinder valve control key or knob to regulate the degree of heat. A feature of the GrilloGas BBQ is that it offers various heat zones. This is very useful as some foods cook quicker than others and the food that is ready first, can be moved to the cooler areas of the dish to keep warm whilst the balance of the food is still cooking.
- When using the appliance in windy conditions always try to use the appliance in an area shielded from wind as high winds will affect the performance of the appliance and the flame may damage the unit in high winds.
- To pack away, let the unit cool off. After cleaning, place the appliance in clean and dry place.

5. Changing the Gas Cylinder

- Check that the burner is extinguished before disconnecting the appliance from the gas cylinder by turning the control knob fully closed as shown in Fig 2
- To disconnect the appliance from the gas cylinder, unscrew the stem from the cylinder in an anti-clockwise direction after removing the grill plate and burner pan from the stem. Check the seal before replacing the gas cylinder.
- Change the gas cylinder outdoors and away from other people.

6. Cooking Options

There are three available options with your Grillogas Braai appliance. These are:

GRILLING

- For this type of cooking, place the grill plate (A) in the burner pan (B) with the ribbed side of the grill plate face up.
- Make sure that the grill plate is securely located in the burner pan. Leave the grill on for about 5 10 minutes on a medium heat to ensure the grill plate is evenly heated. This cooking option is best suited for steaks, and other flat cuts of meat. For optimum results, turn the grill to medium heat by adjusting the gas flow. Meat cooked in this manner will have the blackened lines as on professionally grilled steaks. Cook only for a few minutes per side. Adjust the cooking time and temperature depending on personal preferences for rare, medium or well done.

FRYING

- For this type of cooking, use the same setup as described for the grilling option but with the grill plate (A) reversed so that the flat surface is face up.
- This option is ideal for frying eggs, bacon, etc. It is also useful for cooking omelet's, pancakes, etc. Please note that being a shallow pan, it is not suitable for deep-frying. The easy clean surface encourages the minimum use of fat for healthy cooking.

STIR FRYING


For this type of cooking, use the same setup as described for the frying option.

7. Care of the Grill Plate

- You will add years to the life of the grill plate if you use plastic or wooden utensils when cooking.
- Do not overheat the grill plate and always add a little cooking oil to the surface before use.
- Always allow the grill plate to cool before immersing it in water.
- The use of abrasive detergents are not recommended, as this will permanently scratch or mark the surface.
- If through misuse, burned grease or food residue collects on the surface, it can usually be removed with warm water and mild detergent. In an extreme case, it can be removed by a thorough cleaning with a mixture of 3 tablespoons of bleach, 1 tablespoon of liquid detergent and 1 cup of water. Apply to the cooking surface with a sponge or plastic scrubbing pad. After cleaning recondition the surface with a light wipe of oil before re-use
- After use, wash the grill plate, then cover with olive or vegetable oil. Light the GRILLOGAS BRAAI and leave on until oil is absorbed, the wipe with a dry cloth.

8. Maintenance

- REPLACING A BLOCKED JET
- Should the hole in the jet become blocked, this may result in a small flame or no flame at all. Do not attempt to clean the jet with a pin or other such device as this may damage the orifice, which could make the appliance unsafe.
- Ensure the cylinder valve is closed.
- If the appliance was in use, it will be hot. Allow to cool before attempting any maintenance.
- Unscrew the appliance from the gas cylinder.
- Remove the Mesh and Filter using a very thin flat screwdriver(Located at the bottom of the stem (E). The Jet is now visible to remove. Unscrew the jet from the adaptor using a suitable size flat screw driver. Do not use pliers to remove the jet as this may damage the jet, making it unusable or impossible to remove.
- Screw a new unique No. 23 CADAC jet (See Section 9), ensure a gas tight seal. Don't over tighten the jet. Then place the mesh, followed by the filter. REPLACEMENT OF SEALS
- Remove the rubber seal (G) without damaging the seat, replace it with a new seal making sure it is well seated.

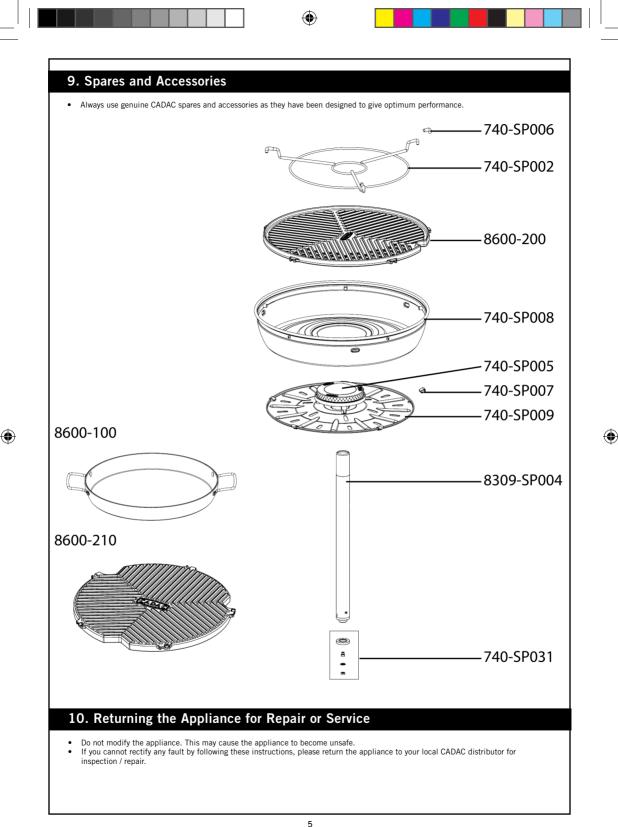



CADAC INTERNATIONAL P.O. Box 43196, Industria, 2042 South Africa Tel: +27 11 470 6600 Fax: +27 11 470 9401 Email: info@ccadac.co.za www.cadac.co.za

CADAC EUROPE Ratio 26, 6921 RW Duiven The Netherlands Tel: +31 26 319 7740 Fax: +31 26 319 7743 Email: info@cadaceurope.om www.cadaceurope.com

CADAC GERMANY Ratio 26, 6921 RW Duiven The Netherlands Tel: +31 26 319 7740 Fax: +31 26 317 7743 Email: info@cadaceurope.nl www.cadaceurope.com

CADAC ZIMBABWE Exclusive Brands Africa Unit 8 Birkenhead Park 43 Josiah Chinamano Street Belmont, Bulawayo Tel/Fax: +263 971 740 (Bulawayo) Tel/Fax: +263 479 2564 (Harare) www.cadac.co.zw

CADAC MALAYSIA KATRIN BJ SDN BHD (90816-M) No 12, Jalan TP2, Taman Perindustrian SIME UEP, 47600 Subang Jaya, Selangor Darul Ehsan, Malaysia. Tel (603) 8023 3939 Fax (603) 8023 3339 info@katrinbj.com

CADAC GREECE Thessi Mandra Ntouni Koropi194 00 Athens Greece Tel: +30 210 602 1019 Fax: +30 210 662 8888 Email: y.economou@camper.gaz.gr www.camper.gaz.gr CADAC AUSTRALIA CADAC-BBQ Pty Ltd, Australia Tel: +61 420 503 967 Customer Care: 1300 135 011 Fax: +61 755 728 682 Email: info@cadacbbq.com.au www.cadacbbq.com.au

CADAC FRANCE Le Viallon, 42520 Veranne France Tel: +33 4 74 78 13 65 Email : info@cadaceurope.nl www.cadaceurope.com

CADAC NEW ZEALAND Riverlea Group (Pty) Ltd 2A Maui Street, Pukete, Hamilton 3200, New Zealand Tel: +64 7 847 0204 Fax: +64 7 847 0205 Email: sales@riverleagroup.co.nz

CADAC HONG KONG Everything Under The Sun 902 Horizon Plaza, 2 Lee Wing Street, Ap Lei Chau, HK Tel :+852 2554 9088 Fax: +852 2818 8595 Email: craig@everythingunderthesun. com.hk

CADAC DENMARK Camper Fritid Industrivej 11 6640 Lunderskov Denmark Tel.: +45 7558 5255 Fax.: +45 7558 6312 info@camper.dk

CADAC CHINA Room 807, Huayue International Building, No.255 Tiangao Road, South Yinzhou business district, Ningbo, China Zip:315199 Fax:+86 574 87364160 Tel:+86 574 87723937 Email: info@cadac.com.cn

CADAC SAUDI ARABIA Noble Ventures 34 Ibn Saad Al Kathib Street, Khalidiya, Jeddah, 21435, Kingdom of Saudi Arabia info@nobleventures.co CADAC UK 1 Open Barn Backridge Farm Business Centre Twitter Lane, Bashall Eaves Clitheroe, BB7 3LQ United Kingdom Tel: +44 333 200 0363 Fax: +44 333 200 0364 Email: inf0@cadacuk.com www.cadaceurope.com

CADAC Mozambique Exclusive Brands Africa 492 Avenida Namaacha Maputo, Mozambique Tel: +258 21 406254 www.cadac.co.mz

CADAC ITALY Brunner SRL/GMBH via Buozzi, 8 39100 Bolzano (Italy) PIVA 00848790218 Tel: +39 0471 542900 Fax: +39 0471 542905 Email: info@brunner.it www.brunnerinternational.com

CADAC USA 50 Mountain View Road Warren, NJ, 07059 Tel: 908 604 0677 Mobile: 908 463 9828 Email: cadacusa@yahoo.com

CADAC CZECH RÖSLER Praha spol. s r.o. Výhradní zastoupení pro ČR a SR Elišky Junkové 1394/8, 102 00 Praha 10, Česká republika Tel: +420 267 188 011 Fax: +420 272 651 046 E-mail: obchod@rosler.cz www.rosler.cz

CADAC TURKEY And Dayanikii Tuketim Mallari San. Ve Tic. Ltd. Sti. Gumuspala Mah. E5 Yanyol Cad. No:196 34320 Avcilar/Istanbul/ Turkey Tel: +90 212 590 38 38 Fax: +90 212 593 02 45 Email: ygunaydin@andoutdoor.com www.grilliguru.ee CADAC SINGAPORE Hy-Ray Private Limited 40 Jalan Pemimpin, #02-10, Tat Ann Building, Singapore 577185 Tel: +65 6253 2277 Fax: +65 6251 8760 Email: info@hyray.com.sg

CADAC SOUTH EAST EUROPE Borska 45E 11 000 Belgrade Serbia Tel: +381 11 339 2700 Email: office@cadac.rs www.cadac.rs

CADAC KOREA Suite 502 Pika Bldg. Hogye-Dong, Anyang-Si, Gyeonggi-Do, South Korea Fax: +82 2 2179 9292 Tel: +82 31 427 5466 cadackorea@gmail.com

CADAC ZAMBIA Exclusive Brands Africa Limited 7225A Kachidza Road Light Industrial Area Lusaka, Zambia Tel: +260 (0)969 515908 Email: info@ebagrp.com

 $(\mathbf{\Phi})$

CADAC UNITED ARAB EMIRATES Picnico General Trading PO Box 1797 Dubai UAE Tel. nr: +971 4 267 9992 Fax: +971 4 267 9940 Email: showroom@picnico.ae

CADAC ESTONIA Alvar Landson Grilliguru OÜ Kadaka tee 7/2 12915 Tallinn Tel: +372 5104855 www.grilliguru.ee

CADAC SWEDEN Kama Fritid AB Box 114 560 27 Tenhult Sweden Tel: +46-(0)36-35 37 00 info@kamafritid.se

CADAC ISRAEL PO.box 8122819 Hayarden 13, Yavne, Israel Tel: +972-73-2595666 Fax: +972-8-9429968 Email: grill@i-berman.co.il