

CONNECTING THE SOUNDBAR TO THE TV

1. Power connection: First connect the DC output of the power adaptor to the soundbar, then plug into a suitable AC socket. Do not power on the mains until all the other connections have been made.
2. Connect the Subwoofer out to the speaker inputs on the rear of the subwoofer, ensuring correct polarities.
3. Connection to TV: If your TV has an OPTICAL or HDMI port with ARC, use an OPTICAL or HDMI cable to connect to the respective port on the soundbar.
OR
If your TV does not have OPTICAL or HDMI (ARC), use a 3.5mm AUX cable to connect the Auxiliary output or the headphone jack on the TV to the AUX IN port on the soundbar.


CONNECTING THE SOUNDBAR TO OTHER DEVICES

1. OPTICAL input or HDMI (ARC) on the soundbar to OPTICAL output or HDMI (ARC) of other devices (Blue-ray/ DVD player/ gaming consoles).
2. Other audio sources are Bluetooth, USB and AUX IN.


OPERATING INSTRUCTIONS**Turning on:**

Turn on at the mains outlet; then press the POWER Button on the front of the soundbar, or the POWER Button on the remote control.
To turn off, first press the POWER Button to set the unit to standby mode; then turn off at the mains outlet.


Bluetooth mode:


1. Press the M Button on the unit or  Button on the remote control until Bluetooth Mode is selected.
2. On your Bluetooth-enabled device, choose 'Aiwa ASB-1215WL' the name of the soundbar and connect. Once paired, you can play music from your Bluetooth-enabled device on the soundbar.

USB mode:

1. Connect a USB memory device to the USB port.
 2. Press the M Button on the unit or  Button on the remote control until USB mode is selected. Now you can play music from the USB device on the soundbar.
- Note: Only mp3, WMA files can be played. Maximum size of device that can be connected is 32GB.

AUX/OPTICAL/HDMI(ARC):

1. Connect the device using any of these modes.
2. Press the M Button on the unit or  Button on the remote control repeatedly to select the correct mode to play music from the connected device on the soundbar.

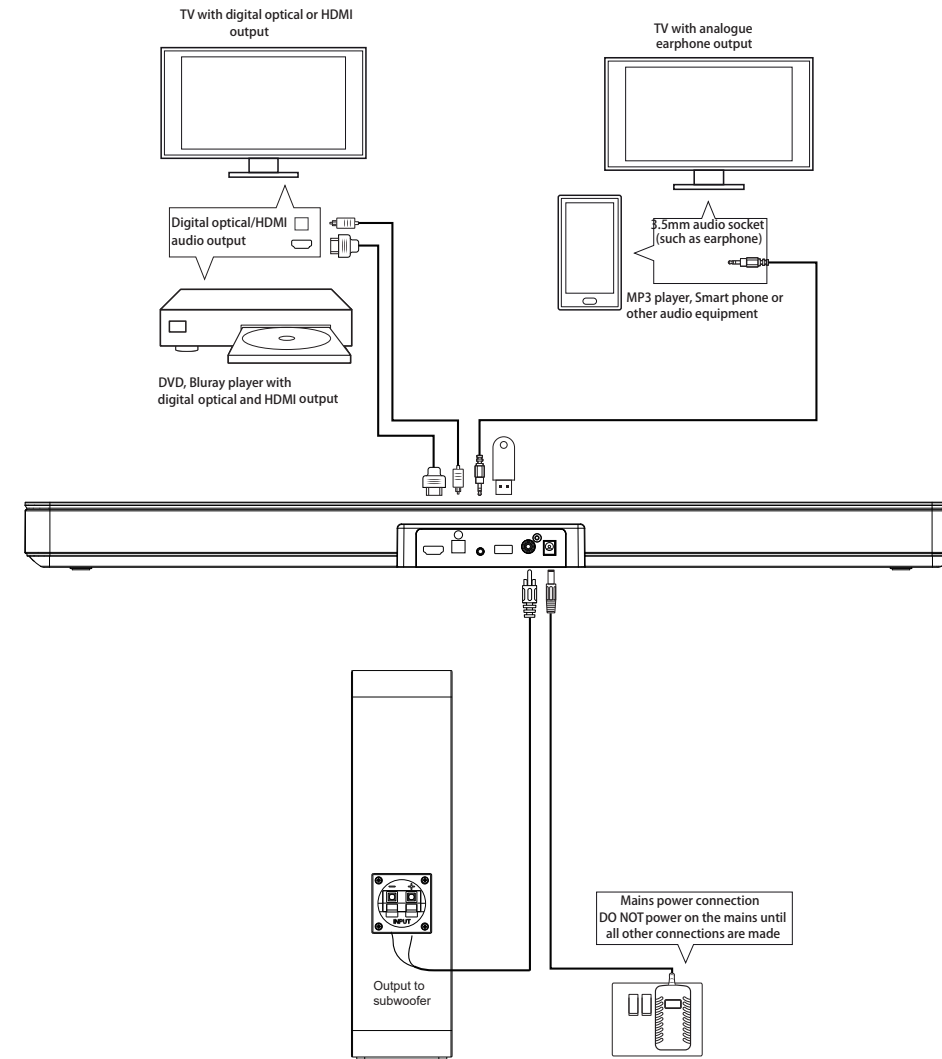

Amplifier	
Power Output	12W*2+25W
Frequency Response	45HZ-20KHz
Main Unit	
Power Supplier	Input:100-240V~50-60HZ Output: 15V/2A
Power Consumption	50W
Dimensions	750*110*54mm (Main Unit) 95*365*385mm (Subwoofer)
Remote control	
Battery	2 x AAA
Bluetooth	
Bluetooth Version	BT4.2+EDR



Important!
Please read the instructions carefully before installation and use.

Power Source

Only use the power supply that is provided with the unit. Using an unauthorised power supply will invalidate your guarantee and may irrecoverably damage the product.

Disconnect your soundbar from the mains power supply during thunderstorms.

If the soundbar will not be used for a long period of time, make sure that the mains power is unplugged and the battery is removed from the remote control battery compartment.

The supply terminals are not to be short-circuited.

Never throw batteries in a fire or attempt to open the outer casing.

Batteries are harmful if swallowed, so keep away from young children.

CAUTION: Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.

Moisture and Water

Do not leave the unit in low temperatures as moisture can form inside the product, which may damage the circuit board.

Do not immerse in water or other liquids; do not use in the immediate vicinity of water such as bathtubs, washbowls, swimming pools etc.

Heat Sources and Flames

Do not leave the unit in high temperatures as the electronic devices and plastic parts may warp in the heat.

Keep the unit away from bright sunlight or heat sources, such as a radiator.

No naked flame sources, such as lit candles, should be placed on the product.

Ventilation

Do not block or cover slots, holes or openings by placing the unit on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation.

General Safety Information


This product is intended for indoor, household use only.

Keep the product and all its parts out of reach of small children.

This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or given instruction concerning the use of the appliance by a person responsible for their safety.


Do not attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.

Do not use your soundbar near emergency/intensive care medical equipment or during an electrical storm.

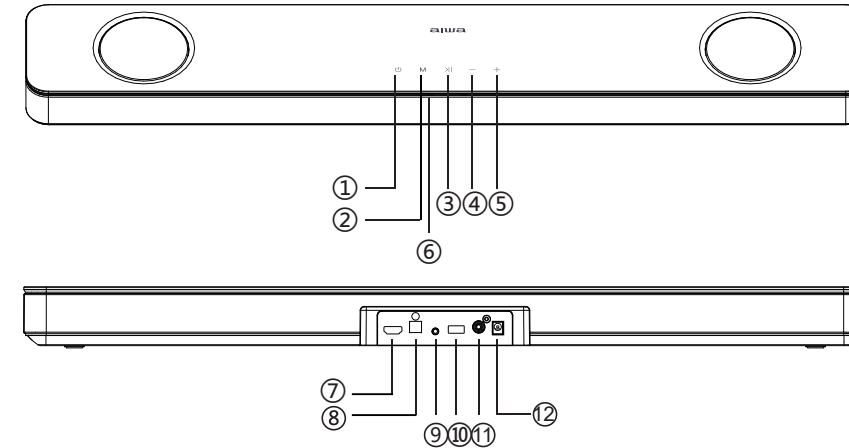


1. Press and hold: Power on/Standby
2. Switch between different modes (BT/USB/AUX/OPTICAL/HDMI-ARC)
3. Press and release: Play/Pause
Press and hold: Unpair a BT device
4. Press and hold: Volume down
Press and release: Skip backward
5. Press and hold: Volume up
Press and release: Skip forward
6. Mode LED indicator
7. HDMI-ARC
8. Optical
9. Aux In socket

 Please note: If no source is played, the unit will enter Standby mode automatically after about 20 minutes.

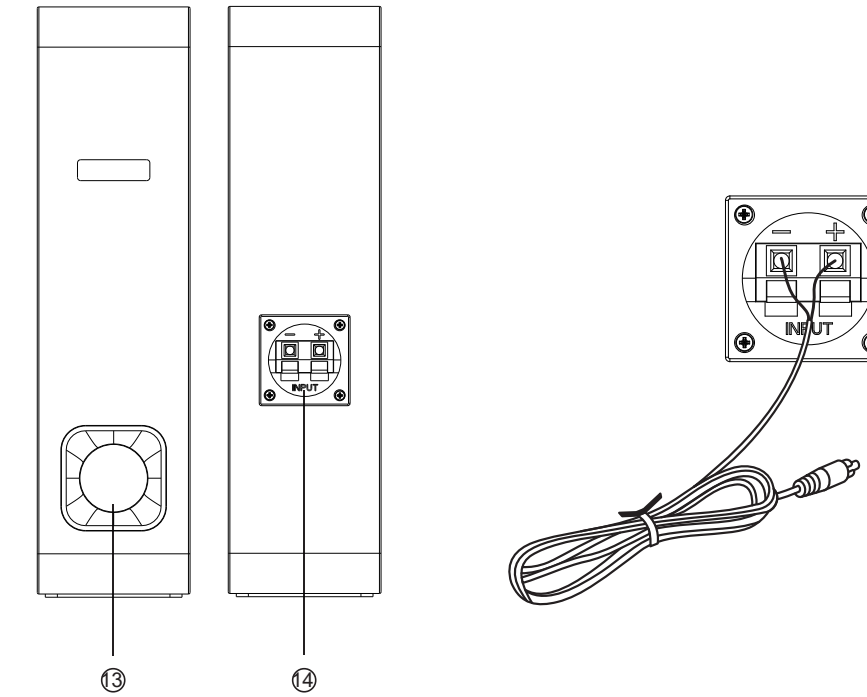

10. USB
11. Output to Subwoofer
12. DC socket
13. Inverter tube
14. Subwoofer speaker inputs

 Note: Ensure correct polarities when connecting the Subwoofer speaker inputs from the Soundbar Red wire to the positive (+), black wire to the negative (-).

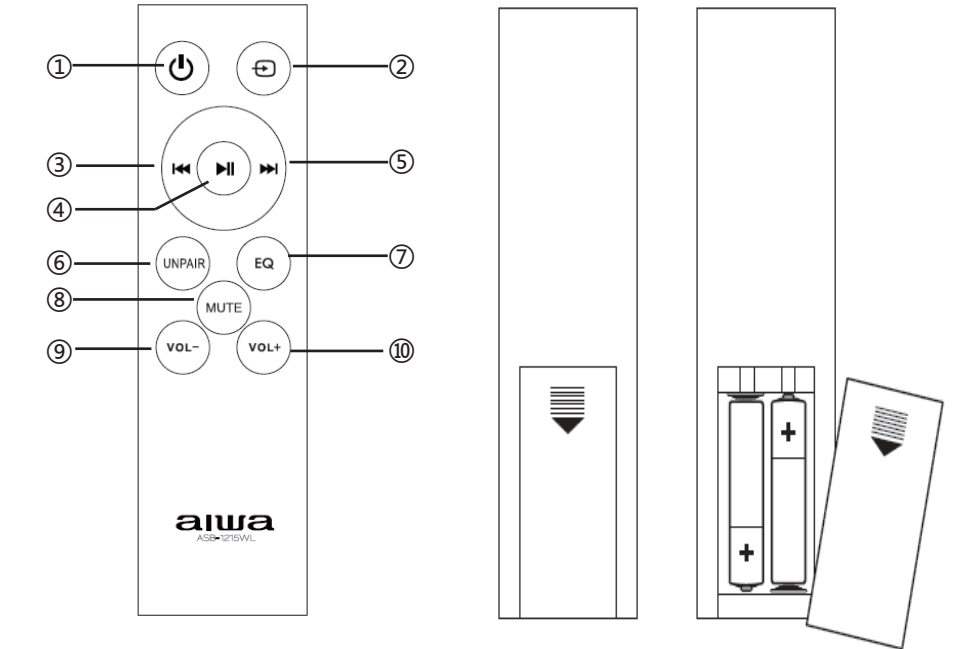

1. Power on/Standby
2. Switch between different modes(BT/USB/AUX in/Optical/HDMI-ARC)
3. Skip backward
4. Play/Pause
5. Skip forward
6. Unpair a Bluetooth device
7. Change the EQ setting
8. Mute/Unmute the sound
9. Volume down
10. Volume up
11. Install the remote batteries